



1. Steps as following:

- 1) Start DVR,enter login interface,click "forget password",pop up forget password message box,users can see serial number of the DVR.

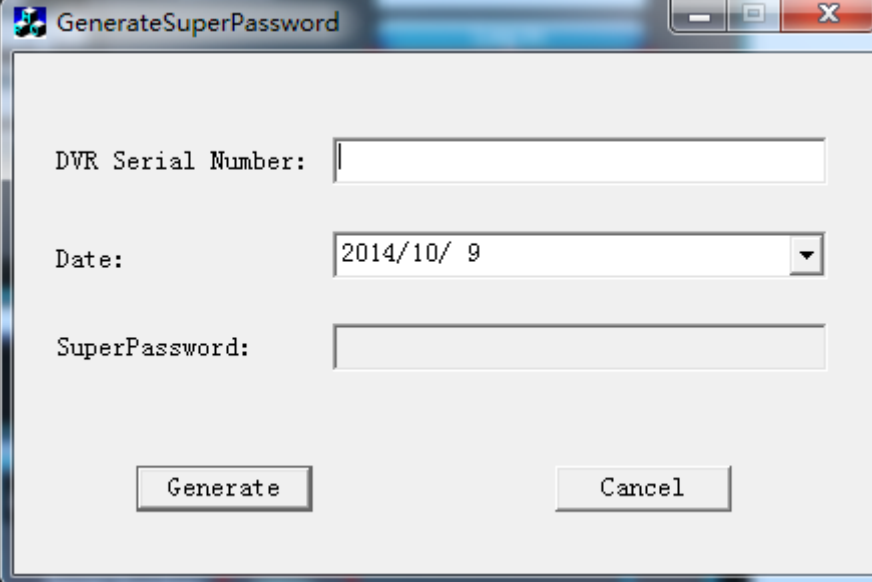

2) Run GenSuperPassword.exe.

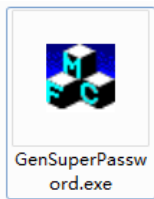

GenerateSuperPassword


DVR Serial Number:

Date: 2014/10/ 9

SuperPassword:

Generate Cancel

3) Input the serial number and date in corresponding text-box. Choose the date must according to the date you set on DVR.

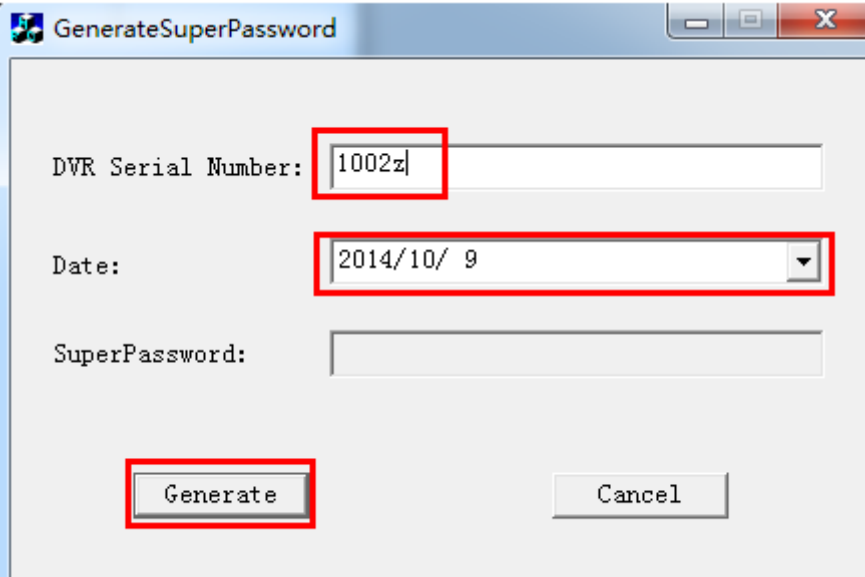

GenerateSuperPassword


DVR Serial Number: 1002z

Date: 2014/10/ 9


SuperPassword:

Generate Cancel

4) Click "Generate", appear such information show as below:

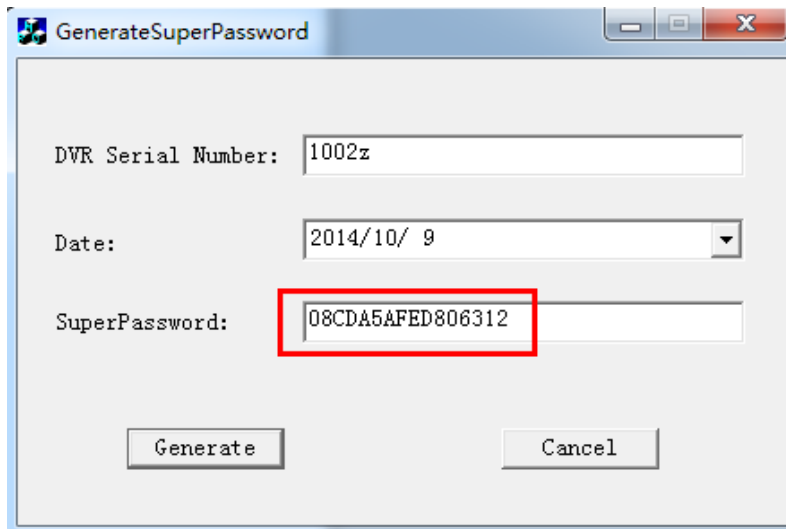

5) Input the super password that get from GenSuperPassword.exe to the forget password message box on DVR.

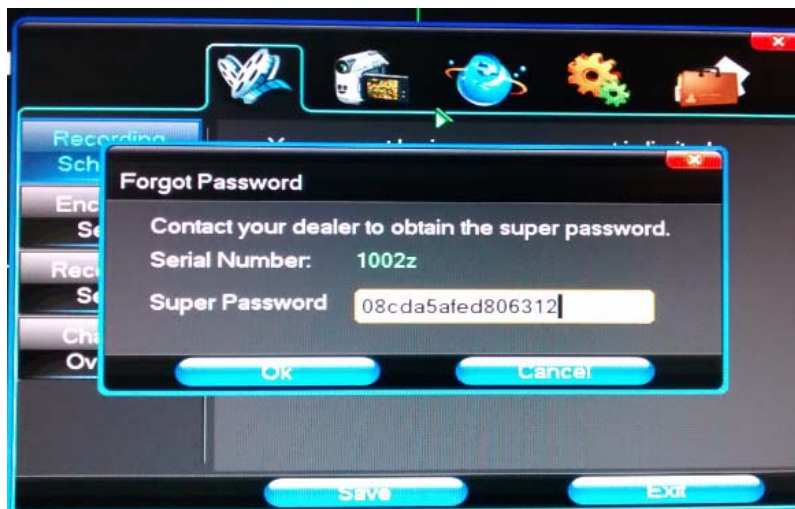

6) Click "ok", pop up "User account initialization is successful".



7) Click "ok",then use default password to login.the default password is empty.

Note:If there's wrong with super password,please check you choose the right date or fill in right password carefully.